

**power**technique

**PT(S)410**

Voltage (V): **400/230**

Frequency (Hz): **50**

**STATIONARY WITH CANOPY**

**AUTOMATIC WITHOUT ATS**

## Technical Information


PRP Power (Kva)	<b>375</b>
Standby Power	<b>412</b>
PRP Power (Kw)	<b>300</b>
Standby Power (Kw)	<b>329.6</b>
Model	<b>STATIONARY WITH CANOPY</b>

### Weight and Dimensions (mm)

Length (L)	<b>4580</b>
Width (W)	<b>1500</b>
Height (H)	<b>2240</b>
Weight (kg)	<b>4950</b>
Fuel tank capacity (l)	<b>537</b>

### Noise Level

Acoustic pressure [LpA] (Dba)	<b>69</b>
Acoustic power [LwA] (Dba)	<b>97</b>

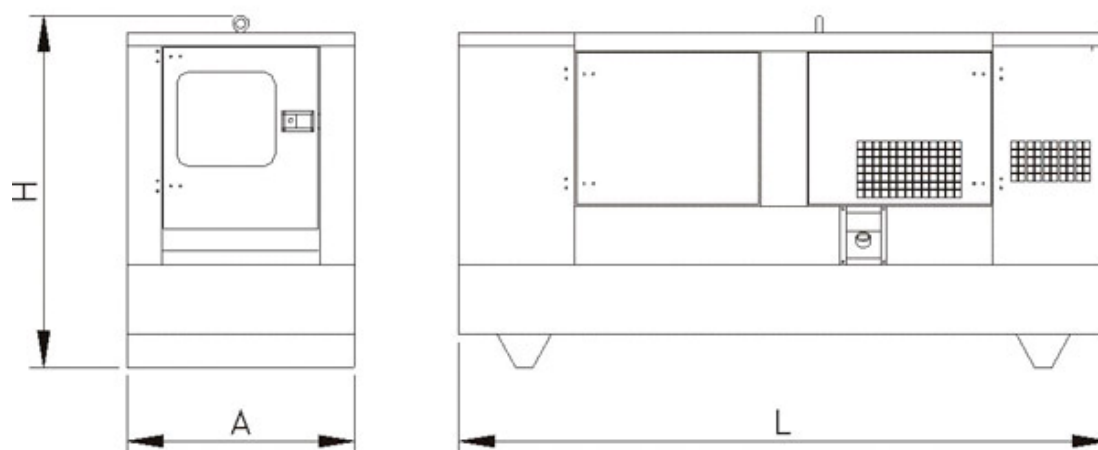

**Consumption**

	PRP Power		Standby Power	
	L/h	Range (hours)	L/h	Range (hours)
25%	19.7	27.3	21.3	25.2
50%	36.1	14.9	58.3	13.6
75%	53	10.1	58.3	9.2
100%	70.7	7.6	78.1	6.9

**Engine**

Brand	<b>VOLVO</b>
Model	<b>TAD 1241 GE</b>
Electronic management	✓
No. of Cylinders	<b>6</b>
Engine Capacity	<b>12130</b>
Bore (mm)	<b>131</b>
Stroke (mm)	<b>150</b>
Compression ratio	<b>17.5:1</b>
Water cooled	✓
Speed (r.p.m.)	<b>1500</b>
Preheating system	✓
Fuel tank capacity (l)	<b>537</b>

**Cooling System**

Flow of air from fan (m3/min)	<b>396</b>
-------------------------------	------------

**Lubrication System**

Oil sump capacity (l)	<b>31</b>
Maximum oil consumption (%fuel consumption)	<b>0.17</b>

**Air Intake System**

Aspirated air flow (m3/min)	<b>24</b>
-----------------------------	-----------

**Electrical System**

Batteries	<b>12V 140 Ah</b>
-----------	-------------------

**Exhaust System**

Input diameter (")	<b>6</b>
Output diameter (")	<b>7.6</b>
T <sup>a</sup> gas emission (°C)	<b>505</b>
Gas flow	<b>63</b>

**Alternator**

Model	<b>HCI 4_4 F1</b>
Electronic Regulation	✓
AVR	<b>SX440</b>
Power (Kva)	<b>450</b>

**Electric Panel****Measuring Instruments**

Voltmeter	<b>1</b>
Battery current gauge	✓

**Control Instruments**

Control card	<b>DEEP SEA</b>
Auto start-up. Mains failure	✓
Manual start-up	✓
Remote start-up	✓

<b>Alarms</b>	
Start-up failure	✓
Battery charge failure	✓
Low oil pressure	✓
High engine water temperature	✓
Low fuel level	✓
Low radiator water level	✓
Emergency stop	✓
Overspeed	✓
<b>Standby Gensets</b>	
3-phase tracking card	✓
Battery charger maintainer	✓
Voltmeter. Switch: PHASE-MAINS-GENSET	✓
Auto/manual function	✓
LED indicators MAINS/GENSET switch	✓
Remote control software	✓
RS 485 communication port	✓
<b>Protection Devices</b>	
Emergency stop button	✓

**Head office address:**

Unit 4, Concorde Close, Sopwith Park,  
 Segensworth North, Fareham, Hampshire, PO15 5RT. UK  
 Tel: +44 (0)1489 560700 Fax: +44 (0)1489 560742  
[sales@powertecnicque.com](mailto:sales@powertecnicque.com) [www.powertecnicque.com](http://www.powertecnicque.com)

Power Tecnicque Ltd reserves the right to modify any characteristic without prior notice. Photos or drawings are based on standard product, being possible to add optional elements